Quick Start Guide

DVP 3960
DVD Video Player

What's in the box?



DVD Video Player

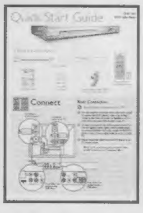

Quick Start Guide

User Manual

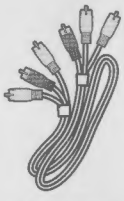

Composite Video Cable (Yellow) and Audio Cables (White/Red)

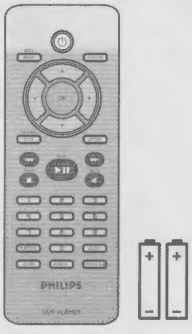

Remote Control and 2 AAA batteries

1 Connect

Basic Connection

A Audio/Video connection to TV

1. Use the supplied composite video cable (yellow plug) to connect the DVD player's TV Out (CVBS) jack to the Video In jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV.
2. To hear the sound of this DVD player from the TV, use the supplied audio cables (red and white plugs) to connect {AUDIO OUT L/R} jacks of the DVD player to the corresponding Audio In jacks on the TV.
3. Plug in the power cable from the DVD player to an AC power outlet.

Note See the accompanying user manual for other possible connections (e.g. Component Video).

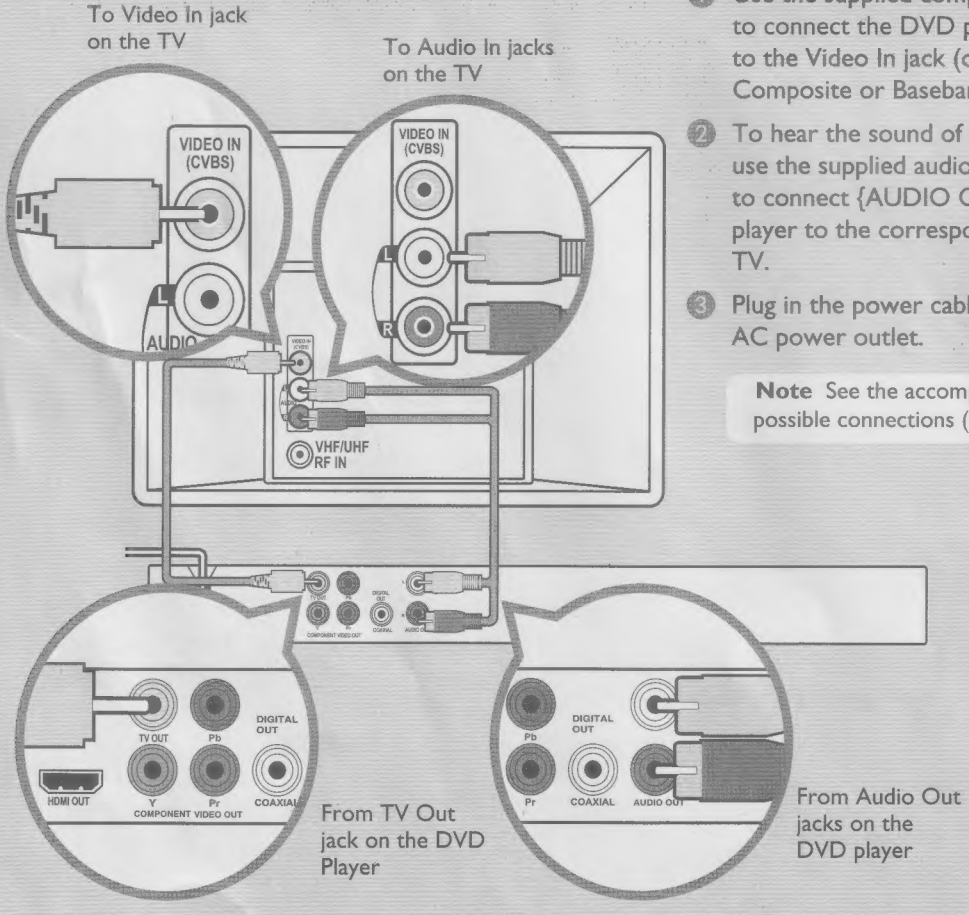

2 Set up

A Finding the viewing channel

1. Press ⏻ on the DVD player's remote control.
2. Switch on the TV.
   - The DVD background appears on the TV screen.
3. Press '0' on the TV's remote control, then repeatedly press the Channel Down button until you see the DVD background screen. This is the correct viewing channel for the DVD player.

Note For some TVs, to find the correct viewing channel, you can keep pressing the AV or SELECT buttons, If still unable to find the correct viewing channel, check the connections again or check your TV's user manual.

B Language preference setup

Use the DVD player's remote control to select the desired On-screen language, Audio language, Subtitle language and Menu language you preferred.

Selecting On-screen language

1. Press **SETUP** on the DVD player's remote control.
2. Press ▼ to highlight {OSD Language}, then press ▶.

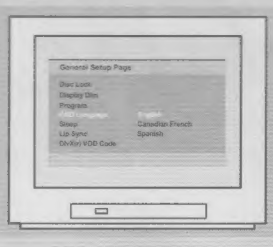

3. Press ▲ ▼ to select a language and press **OK**.

Note The On-screen language for the setup menu will remain once you set it, regardless of various disc languages.

3 Enjoy

A Start playback

1. Playback may start automatically when a disc has been loaded in the disc tray.

Note If a disc menu appears on the TV:
1) Press ▲ ▼ ◀ ▶ to scroll through the options available in the DVD menu.
2) Press **PLAY/PAUSE ▶II** on the option you want to start playback

2. Press **PLAY/PAUSE ▶II** to start playback.
3. To stop playback, press **STOP ■**.
4. Press **DISC MENU** to go back to the disc menu anytime.

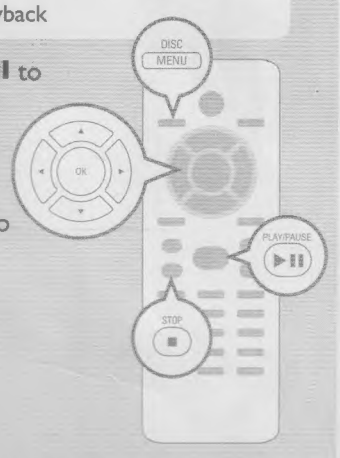

Troubleshooting

For more troubleshooting tips, see the user manual.

No power
- Check if the AC power cord is properly connected.
- Press the STANDBY-ON on the front of the DVD player to turn on the power.

No picture
- Check connection to TV and ensure the plugs are firmly in place.

No sound or distorted sound
- Adjust the volume
- Check audio connections are in the correct input source.

Remote control does not work
- Check the batteries are loaded correctly or replace the batteries with new ones.
- Reduce the distance between the remote control and the DVD player.
- Point the remote control directly toward the IR sensor.

Need help?

User Manual
See the user manual that cames with your Philips DVD Player

Online
Go to www.usasupport.philips.com

Hotline
Call 1-888-PHILIPS (1-888-744-5477) for our operators.

DVP3960/37	KX2B0735212595
MODEL NUMBER	SERIAL NUMBER

2005 © Philips Consumer Electronics
A Division of Philips Electronics North America Corp
P.O. Box 671539
Marietta, GA 30006-0026

Printed in China
SL/0652/37_03

Be responsible
Respect copyrights